

HOME DECORATORS

Collection®


INDUSTRIAL EMPIRE COMPUTER DESK

Assembly Instructions

HDC#:0823200910 MFG#:OME-77006


Please read over the instructions; it will be a time-saver in the long run.

Note: Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

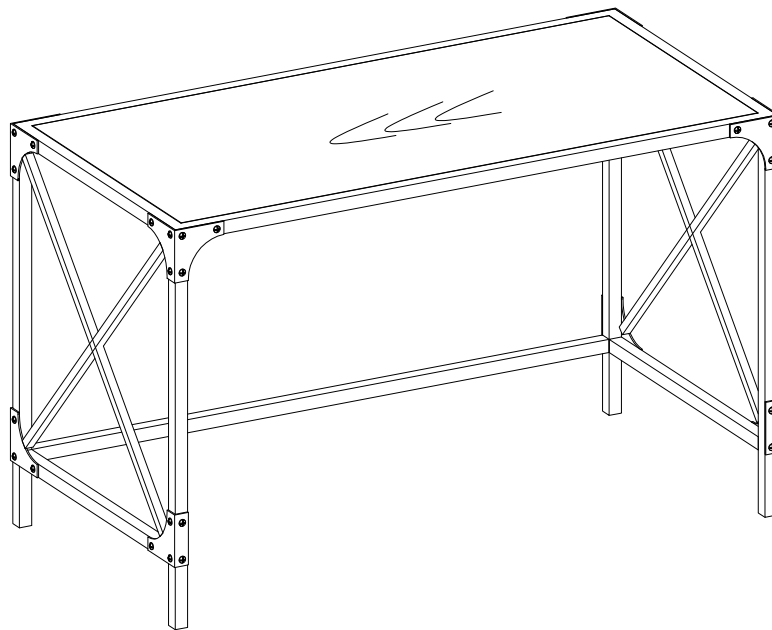


Parts Check List


Please remove all the parts carefully from the box. Thoroughly clean all parts surfaces to remove dust and dirt that may have settled onto the finish.

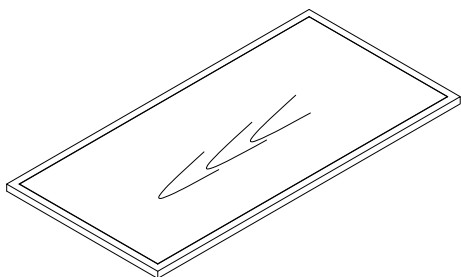


① Top panel - 1 PC

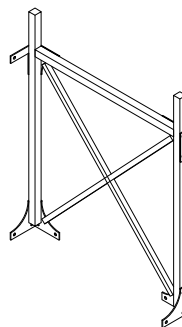

② Left side frame - 1 PC

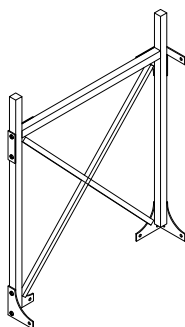


③ Right side frame - 1 PC

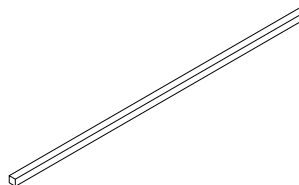


③ Connect bar - 1 PC

Hardware Check List

Please take all hardwares out of the hardware bag.

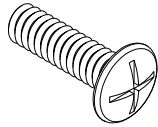




A. Screw - 10 PCS
5/16"× 5/8"

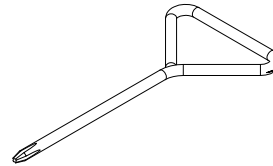

B. Screw driver - 1 PC
Ø5× 108

Do not tighten screws until completely assembled!!

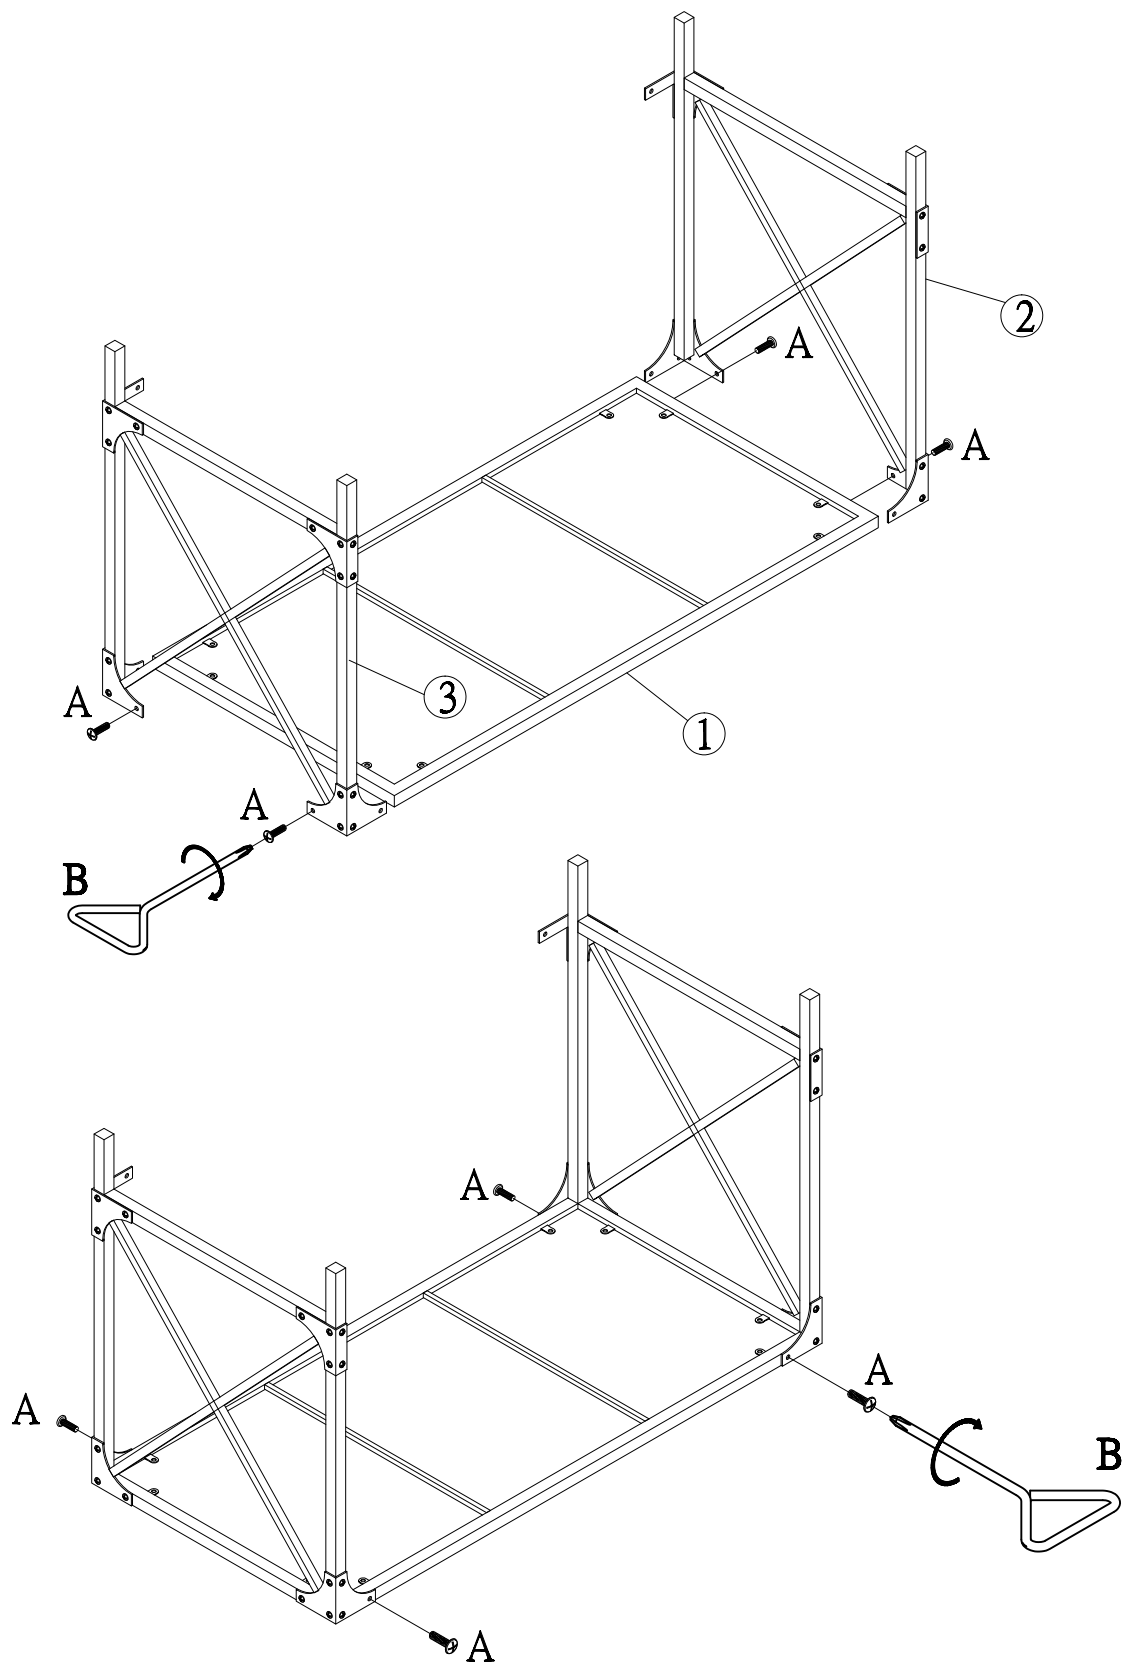

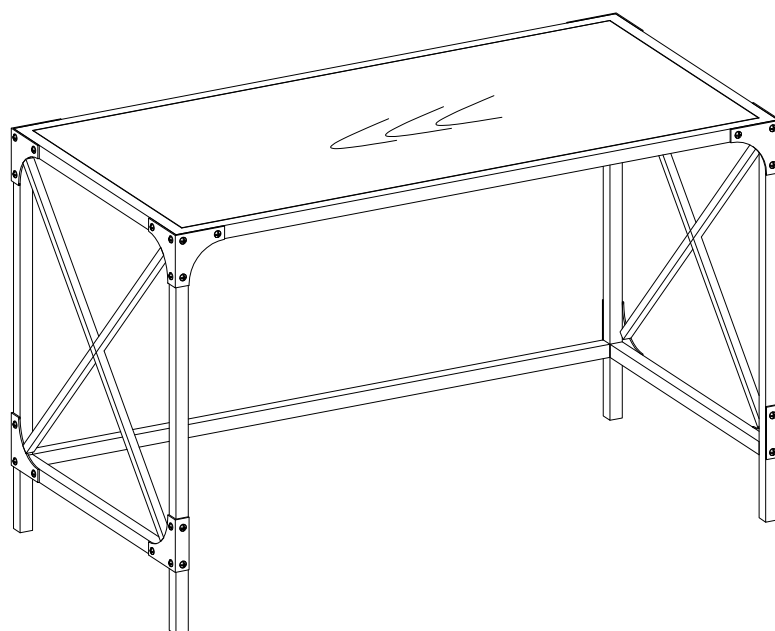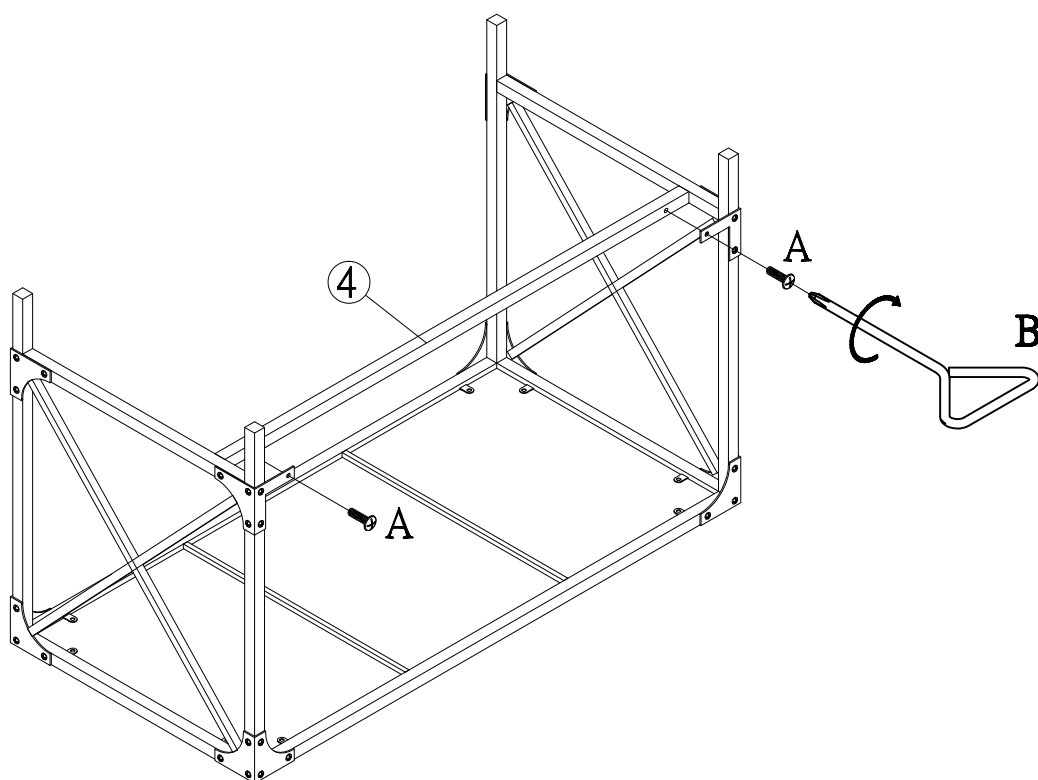

Assembly is completed!